



Gear-Box Driven Attachment Maintenance

BEFORE FIRST USE:

- Fill Your Gearbox: Fill your gearbox with the appropriate oil BEFORE use. Operating any new PTO-drive attachment without oil will damage the gearbox and void the warranty.
- Cut Your PTO: You need to measure and cut your PTO to the proper length before use.
- Grease Your PTO: Apply grease to the connection ends of the PTO to keep lubricated and reduce friction.

ROUTINE MAINTENANCE:

- Check Gearbox Oil: Check the gearbox oil level.
- Change Gearbox Oil: Change the gearbox oil when it becomes dark and filled with contaminants.
- Clean PTO: Clean any debris from the connections of the PTO.
- Check Grease: Check for grease on the connection ends of the PTO to keep lubricated and reduce friction.
- Check For Damage: Check for any damage on the gearbox.
- Check For Damage: Check for wear and damage on the slip clutch.